


# Installing your flat cut letters



## 1 - Fit your template


Attach your paper template in position.

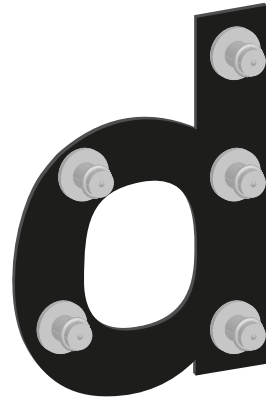

## 2 - Mark fixing points

On the back of the supplied lettering, you will find a number of pre-attached male locators.

One-by-one, line up the letters with the template and firmly push them against the wall or backing board. The tips of the locators will leave dimples in the paper.

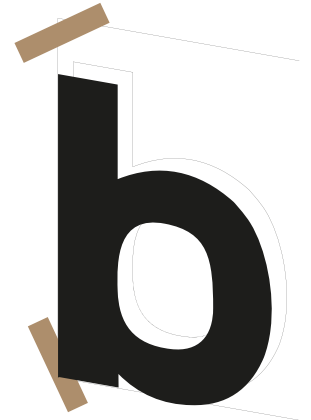


These points create dimples on the paper template

Male Locator



From above you can see the screw locating hole

Female Locator


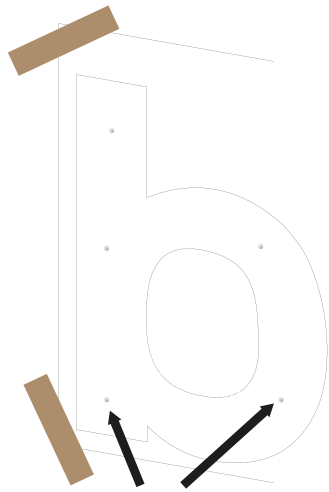


Dimples left by male locators

## 3 - Fix locators

Align each female locator centrally to each dimple (see right) and then screw in place (your wall may require Rawl plugs).

Continue until all female locators are in place.

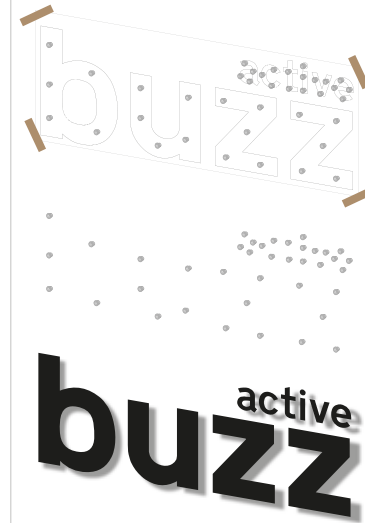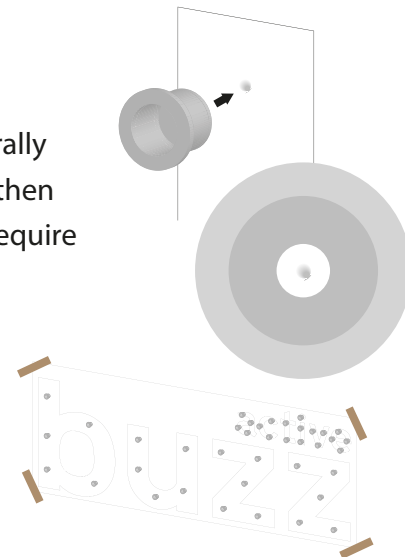

## 4 - Finishing

Remove the template.

Now pop the letters into place - the locators should snap together cleanly.

Fitting is complete!